

# CLEANAIR™ AND DAD-500 AIR PIPING RECOMMENDATIONS

## INSTALLATION

The plumbing of your shop air lines is very important. Correct installation is necessary for the proper performance of your equipment – for an uncontaminated air supply and for sufficient pressure to your spray gun.

Correct air line piping is so important that this one factor alone can reduce contaminants in your air supply up to 75%. Reducing contaminants to the filter also reduces the frequency of filter replacement, maintenance, and of course reduces the risk of contaminants to the paint supply.

Even the size of the pipe is critical. Using pipe that is too small in diameter can cause a pressure drop.

Example: If an air compressor delivers 100 psi through a 100' pipe 1/2" in diameter, there's greater pressure drop than if a 3/4" diameter pipe were used. The chart below provides recommended piping sizes.

**CAUTION** Consult local and national codes for acceptable piping materials.

### Minimum Pipe Size Recommendations Chart

Compressor Size	Compressor Capacity	Main Air Line	Min. Pipe Diameter
1-1/2 and 2 HP	6 to 9 CFM	Over 50 ft.	3/4"
3 and 5 HP	12 to 20 CFM	Up to 200 ft. Over 200 ft.	3/4" 1"
5 to 10 HP	20 to 40 CFM	Up to 100 ft. 100 to 200 ft. Over 200 ft.	3/4" 1" 1-1/4"
10 to 15 HP	40 to 60 CFM	Up to 100 ft. 100 to 200 ft. Over 200 ft.	1" 1-1/4" 1-1/2"

## IMPORTANT! DO NOT DESTROY

It is the Customer's responsibility to have all operators and service personnel read and understand this manual. Contact your local DeVilbiss representative for additional copies of this manual.

**READ ALL INSTRUCTIONS BEFORE OPERATING THIS DEVILBISS PRODUCT.**

## AIR LINE PLUMBING GUIDE

1. After leaving the air compressor, the air line should go straight up as high as possible. This helps prevent any water from leaving the compressor and travelling through the pipe.
2. Horizontal pipes should slope back towards the compressor at least 4" per 50'. As warm air leaves the compressor, it cools and thereby water vapor condenses as it travels through the pipe. This water, a problem in itself, also can cause scaling and rust inside the piping. The backward sloping of the pipe helps drain these contaminants back toward the compressor drain which should be drained daily.
3. A take-off should come from the top of the main air supply line at each air drop. This reduces the risk of water and other contaminants from traveling down the drop into the water separator.
4. Pipe diameter must be of sufficient size for the volume of air being passed as well as the length of pipe used. This will minimize pressure drop.
5. First air drop should be at least 25' from the compressor, although 50' is optimum. This allows the compressed air to cool so any condensation can occur before it gets to the air filter.
6. Shut-off valves are installed before the point of use filter. This allows air to be shut off for filter maintenance.
7. Point-of-use filter – Strongly recommended for eliminating any remaining contaminants. The CleanAir type air control units are most effective in providing a truly contaminant-free air supply.
8. Drain valve – The daily draining of the system at each outlet disposes of the contaminants that build up in the air supply.
9. Drain the compressor trap daily if equipped with a manual drain.

Proper maintenance of the air compressor can reduce airborne contaminants such as particles and oils, and reduce heat and operating cost. Check air filters, oil level and perform regular maintenance per operators manuals.

### Guidelines to Piping Your Shop:

- **Pipe slopes upward – recommend 4" rise in 50 ft.**
- **Minimum 25 ft. to first outlet (50 ft. optimum)**
- **Pipe size (see chart)**
- **Shut off valve before filter**
- **Drain daily**


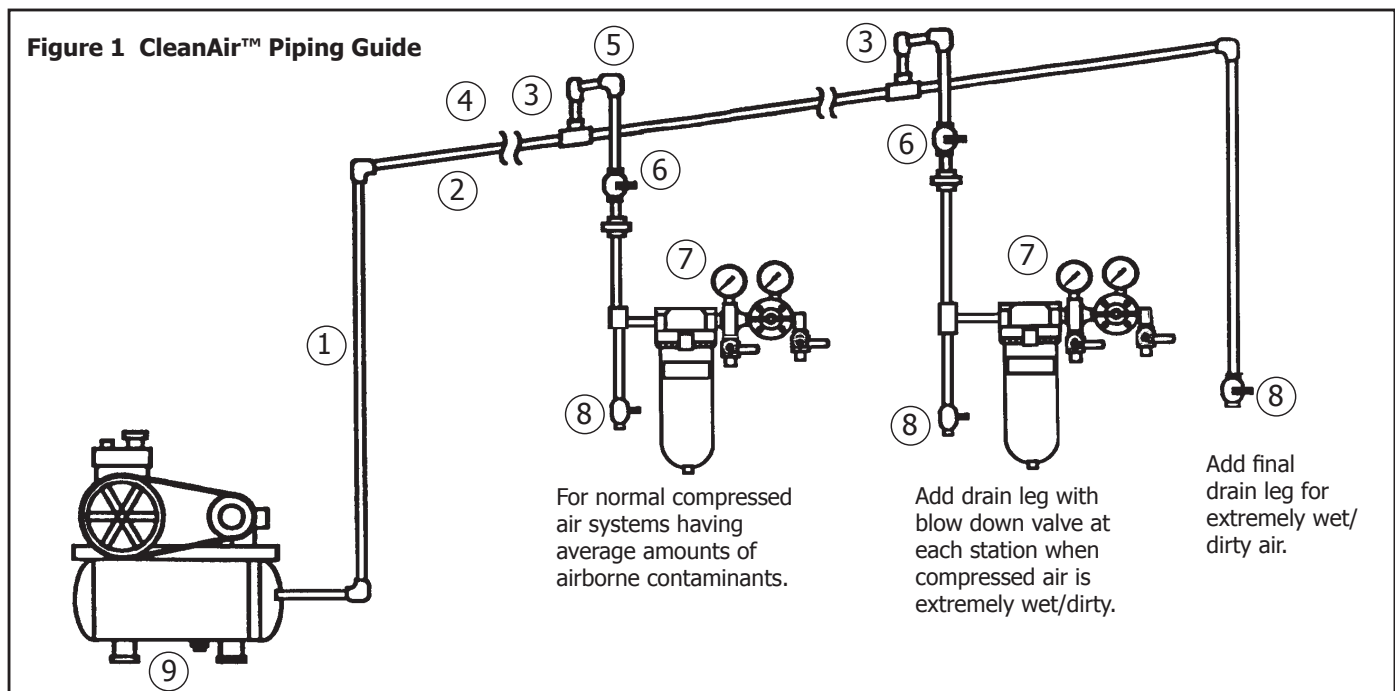


Figure 2 DAD-500 Air Drying System Piping Guide

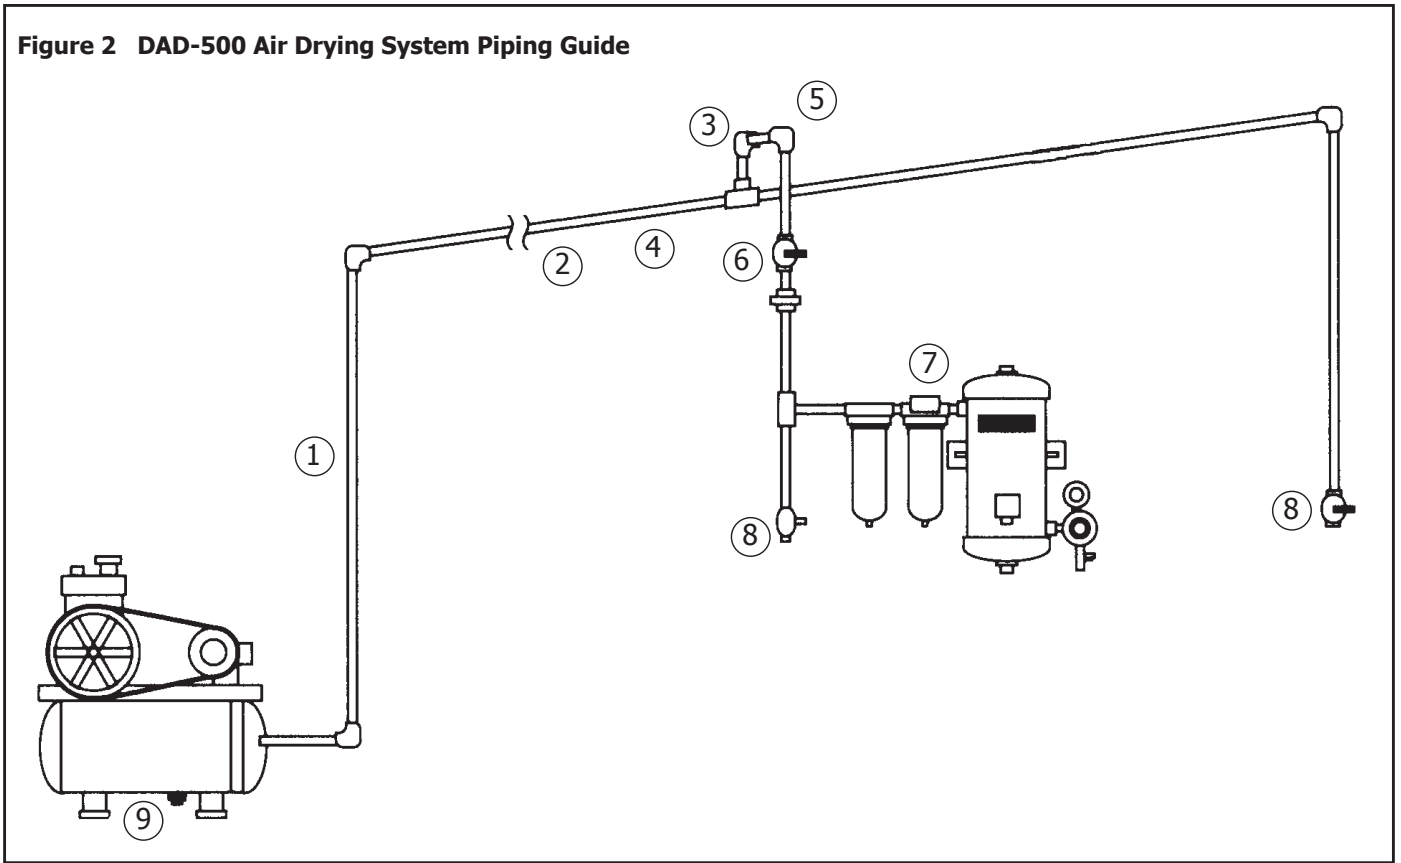

## WARRANTY POLICY

DeVilbiss products are covered by Carlisle Fluid Technologies one year materials and workmanship limited warranty. The use of any parts or accessories, from a source other than Carlisle Fluid Technologies, will void all warranties. For specific warranty information please contact the closest Carlisle Fluid Technologies location listed below.

Carlisle Fluid Technologies reserves the right to modify equipment specifications without prior notice. DeVilbiss®, Ransburg®, ms®, BGK®, and Binks® are registered trademarks of Carlisle Fluid Technologies, Inc.

©2017 Carlisle Fluid Technologies, Inc.  
All rights reserved.

DeVilbiss is part of Carlisle Fluid Technologies, a global leader in innovative finishing technologies. For technical assistance or to locate an authorized distributor, contact one of our international sales and customer support locations.

### USA/Canada

info@carlisleleft.com  
Tel: 1-888-992-4657  
Fax: 1-888-246-5732

### China

mkt@carlisleleft.com.cn  
Tel: +8621-3373 0108  
Fax: +8621-3373 0308

### Germany

info@carlisleleft.eu  
Tel: +49 (0) 6074 403 1  
Fax: +49 (0) 6074 403 281

### United Kingdom

info@carlisleleft.eu  
Tel: +44 (0)1202 571 111  
Fax: +44 (0)1202 573 488

### Mexico

ventas@carlisleleft.com.mx  
Tel: +52 55 5321 2300  
Fax: +52 55 5310 4790

### Australia

sales@carlisleleft.com.au  
Tel: +61 (0) 2 8525 7555  
Fax: +61 (0) 2 8525 7575

### Japan

overseas-sales@carlisleleft.co.jp  
Tel: +81 45 785 6421  
Fax: +81 45 785 6517

For the latest information about our products, visit [www.carlisleleft.com](http://www.carlisleleft.com).



DeVilbiss Automotive Refinishing is part of Carlisle Fluid Technologies, a global leader in innovative finishing technologies. For technical assistance or to locate an authorized distributor, contact one of our international sales and customer support locations.

### USA/Canada

[www.autorefinishdevilbiss.com](http://www.autorefinishdevilbiss.com)  
askus@carlisleleft.com  
Toll Free Tel: 1-800-445-3988  
Toll Free Fax: 1-800-445-6643

### Mexico

[www.autorefinishdevilbiss.com.mx](http://www.autorefinishdevilbiss.com.mx)  
Toll Free Tel: 1-888-835-6232 USA